

1. COMPATIBLE WITH : 2009~1,3,5,6,7,X1,X5,X6,Z4  
2010~X3,MINI


1)HOW TO SET S/W MODE [ (ON,DOWN) 0 : ↓ off / (OFF,UP) 1 : ↑ off ]



DIP\_SW1 : Navigation On/Off  
DIP\_SW2 : AV1 On/Off  
DIP\_SW3 : AV2 On/Off  
AV3 SET BY R/C -USING FRONT CAMERA On  
DIP\_SW4 : REAR CAMERA On/Off  
DIP\_SW6 : NEW CAN On, OLD CAN Off  
DIP\_SW7,8 : VEHICLE SETTING  
DIP\_SW10 : On

OFF ON		1,1,1,1,1,0 : 10.2" 8.8"	OFF ON		1,1,1,1,0,0 : Z4 8.8" 10.2"
OFF ON		1,1,1,0,1,0 : 6.5"	OFF ON		1,1,0,0,1,0 : MINI 6.5"
OFF ON		1,0,1,1,1,0 : 10.2" 2013 520D,528,GT (CAN IS LOCATED UNDER I-DRIVE 2013~)			


2)HOW TO SWITCH SCREEN

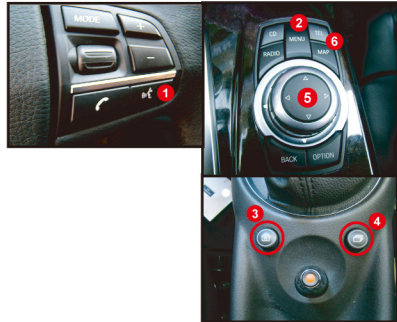

1. PRESS SHORT - SWITCH SCREEN TO ORIGINAL-AV1-AV2.. [ 2 MENU-SAME FUNCTION ]  
IF YOU WANT TO USE THIS BUTTON FOR SWITCH SCREEN, PRESS IT FOR 5 SEC TO ON/OFF THEN PRESS THIS BUTTON FOR LONG, YOU CAN SWITCH SCREEN
2. MENU PRESS LONG - SWITCH SCREEN TO ORIGINAL - AV1-AV2..
3. HOME PRESS LONG - SWITCH SCREEN TO ORIGINAL - AV1-AV2..
4. NAVIGATION PRESS SHORT → ORIGINAL SCREEN
5. PRESS LONG - (IF CONNECT HDMI : SWITCH SCREEN) [ TOGGLE KEY: NAVIGATION ↔ HDMI ]
6. MAP PRESS LONG - SWITCH SCREEN TO ORIGINAL - AV1-AV2..

※ GOING TO AV INPUT DIRECTLY ※

[COMPONENTS]

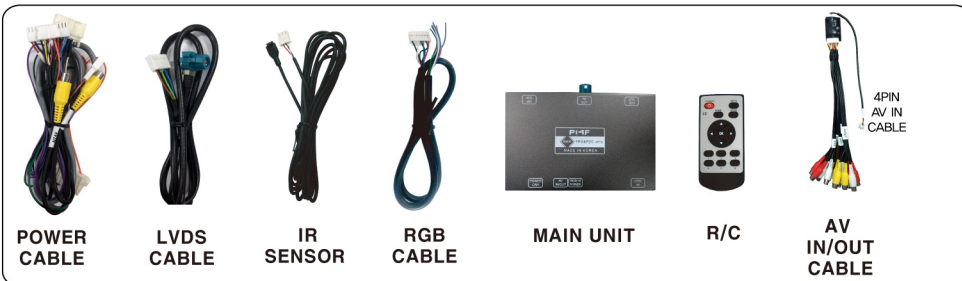

3) HOW TO USE FACTORY SETTING


NAVI-SEL	SELECT THE NAVIGATION MODEL : NEEDS TO REQUEST TO MANUFACTURER
NAVI-DSP	ADJUST NAVIGATION POSITION AND SIZE
HDMI-SEL	TO USE HDMI, SELECT YES
HDMI-DSP	ADJUST HDMI POSITION AND SIZE

AV1-SEL	SELECT DTV MODEL : NEEDS TO REQUEST TO MANUFACTURER
AV2-SEL	SELECT DTV MODEL : NEEDS TO REQUEST TO MANUFACTURER
AV3-SEL	-
AV-DSP	AV DISPLAY ADJUSTMENT
HDMI-DSP	-

BT-CALL	NO USE
V-MOTION	NO USE
FRONT CAM	ON / OFF
VIDEO-ADJ	CONTRA, BRIGHT, HUE CONTROL
HDMI-DSP	ON / OFF

PDC POSITION	PDC ON/OFF, FPG ON/OFF, PDC/FPG POSITION SELECTION
WARNING ON/OFF	WARNING MESSAGE ON/OFF
WARNING LANGUAGE	LANGUAGE SELECTION
AVC TYPE	AROUND VIEW CAMERA BRAND TYPE
AVC TIME	AROUND VIEW CAMERA SYSTEM TIME CONTROL

4)HOW TO CONNECT PROVIDED LVDS CABLE & POWER CABLE

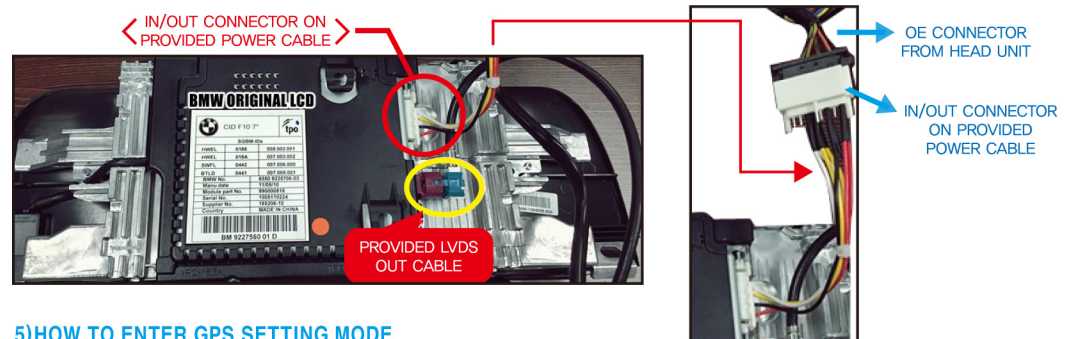

5)HOW TO ENTER GPS SETTING MODE



PRESS OK BUTTON 4 TIMES THEN YOU WILL SEE THE NUMBER 1 ON THE LEFT TOP OF THE SCREEN FROM 1~4.WHEN IT'S NUMBER 4, PRESS THE OK BUTTON TO ENTER THE SETTING MODE.